

# Harbour Shower System Installation Instructions


TR3004

Please retain for future reference

Note: Install bar valve first - refer to separate instructions provided

Brought to you by the Roper Rhodes Group  
 Brassmill Lane Trading Estate  
 Bath BA1 3JF  
 t: 01225 303900


Contents

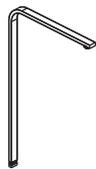

Upper Riser Rail




Lower Riser Rail

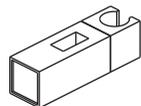


Handset Holder



Wall Fixing Kit

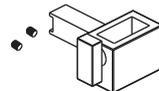

Rail Adjustment Bracket

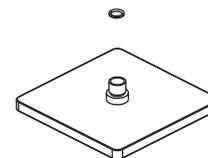

Fixed Shower Head & Gasket



Shower Handset



Shower Hose & Rubber Washers

1. Assemble the riser rail by first sliding the handset holder over the lower rail. Slot the adjustment bracket onto the top of the lower rail and secure using the two grub screws provided.

2. Fasten the riser rail to the Bar Valve using the grub screw at the back of the rail. Run water through valve to check for leaks.

3. Measure and mark distance (A) from the valve to the centre point of the rear end of the rail adjustment bracket. Attach wall bracket in this location using the fixings supplied. (Wall plugs provided are suitable for stone or brick walls. For other wall types use appropriate wall plugs. If in doubt consult an expert).

**IMPORTANT**  
 Wear suitable eye protection when drilling. Take care when using power tools near water - the use of a residual current device (RCD) is advised. Beware of hidden cables or pipes. When drilling tiled surfaces, a piece of masking tape applied to the wall before marking out the fixing holes will stop the drill wandering.

Mark fixing points.

Drill with masonry drill bit of appropriate diameter

4. Fit the rail adjustment bracket into the wall bracket then secure by tightening the grub screw underneath.

5. Slot the upper riser rail into the lower rail assembly and tighten the rail adjustment bracket once the desired height is set.

Upper Riser Rail

6. Change the height of the fixed shower head using the rail adjustment bracket.

7. Screw the shower head to the riser rail, remembering to include the rubber gasket.

8. Attach the shower hose to the handset including washer. Fit handset to the slide bracket.

8. Attach shower hose to the diverter bar valve including rubber washer and check for any leaks.